



3.02 Engranajes de fundición

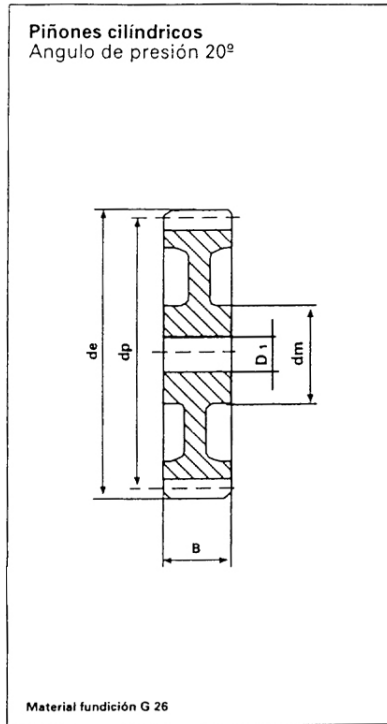

Mod.		Z									
		38	40	50	60	76	80	95	100	114	
2	B = 20	De	-	-	-	-	156	164	194	204	232
		Dp	-	-	-	-	152	160	190	200	228
		Dm	-	-	-	-	-	70	80	80	90
		D1	-	-	-	-	20	20	20	20	20
3	B = 30	De	-	-	-	186	234	-	-	-	348
		Dp	-	-	-	180	228	-	-	-	342
		Dm	-	-	-	80	90	-	-	-	100
		D1	-	-	-	25	25	-	-	-	25
4	B = 40	De	160	168	208	248	312	328	-	-	464
		Dp	152	160	200	240	304	320	-	-	456
		Dm	80	80	90	90	100	100	-	-	110
		D1	25	25	25	25	25	25	-	-	25
5	B = 50	De	200	210	260	-	-	410	-	-	-
		Dp	190	200	250	-	-	400	-	-	-
		Dm	100	100	100	-	-	130	-	-	-
		D1	25	25	30	-	-	30	-	-	-

3.03 Cremalleras

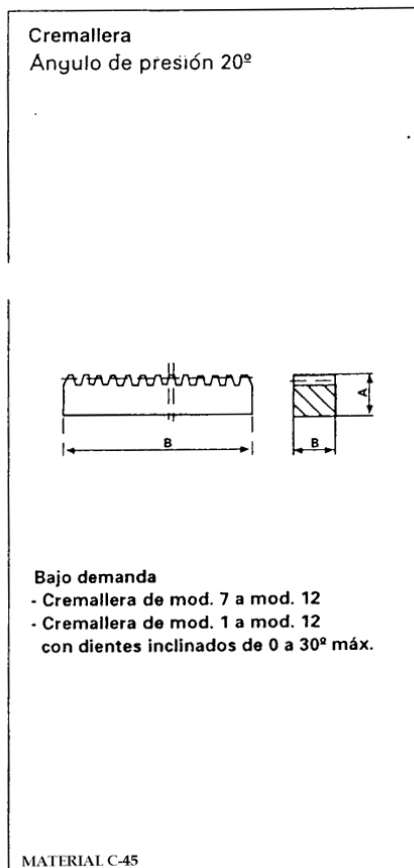

Mod.	L		
	500	1000	2000
	A X B	A X B	A X B
1	15x15	15x15	15x15
1.5	17x17	17x17	17x17
2	20x20	20x20	20x20
2	22x22	22x22	22x22
2.5	25x25	25x25	25x25
3	25x25	25x25	25x25
3	30x30	30x30	30x30
4	20x20	20x20	20x20
4	30x40	30x40	30x40
4	40x30	40x30	40x30
4	35x40	35x40	35x40
4	40x40	40x40	40x40
5	50x50	50x50	50x50
6	60x60	60x60	60x60
8	80x60	80x60	80x60
8	80x80	80x80	80x80